

## WK37 - TowerPack Pro Rescue system


### Prompt Sheet

This equipment should only be used by trained, competent persons.

These user instructions, included in the kit, are to be read in conjunction with the individual user instructions for each specific item of equipment.

### DESCENDING WITH A CASUALTY


Only connect to suitable attachment points on the rescuer's and casualty's harnesses.

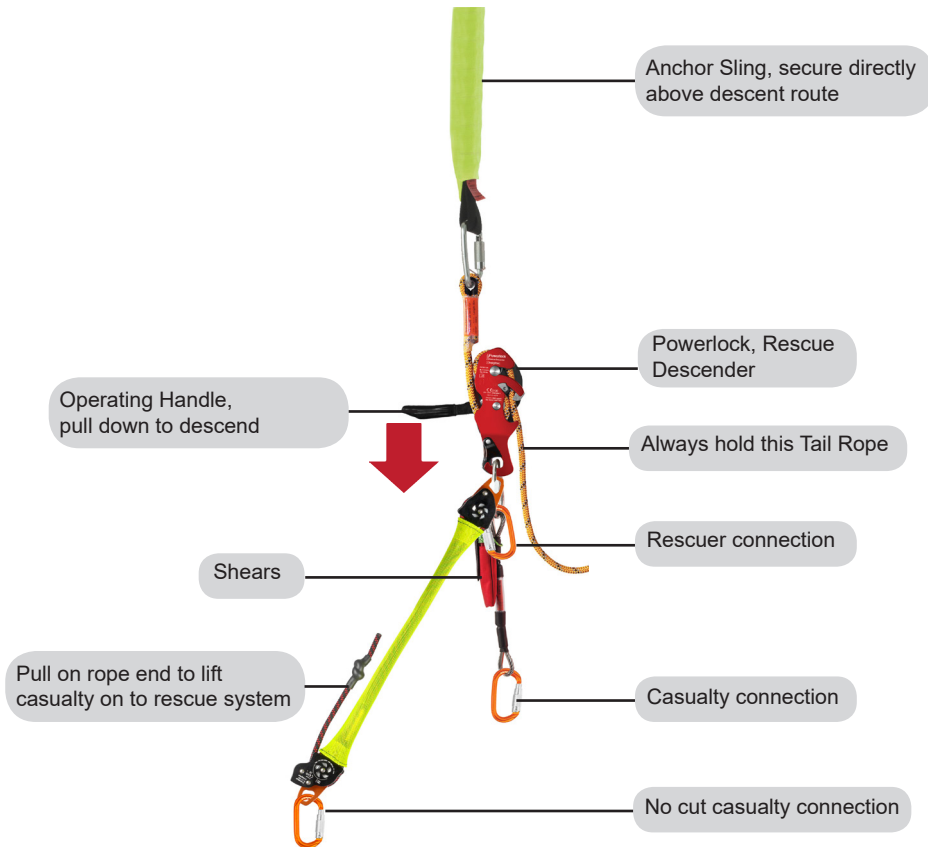

## WK37 - TowerPack Pro Rescue system

### Prompt Sheet

### LIFTING AND LOWERING A CASUALTY

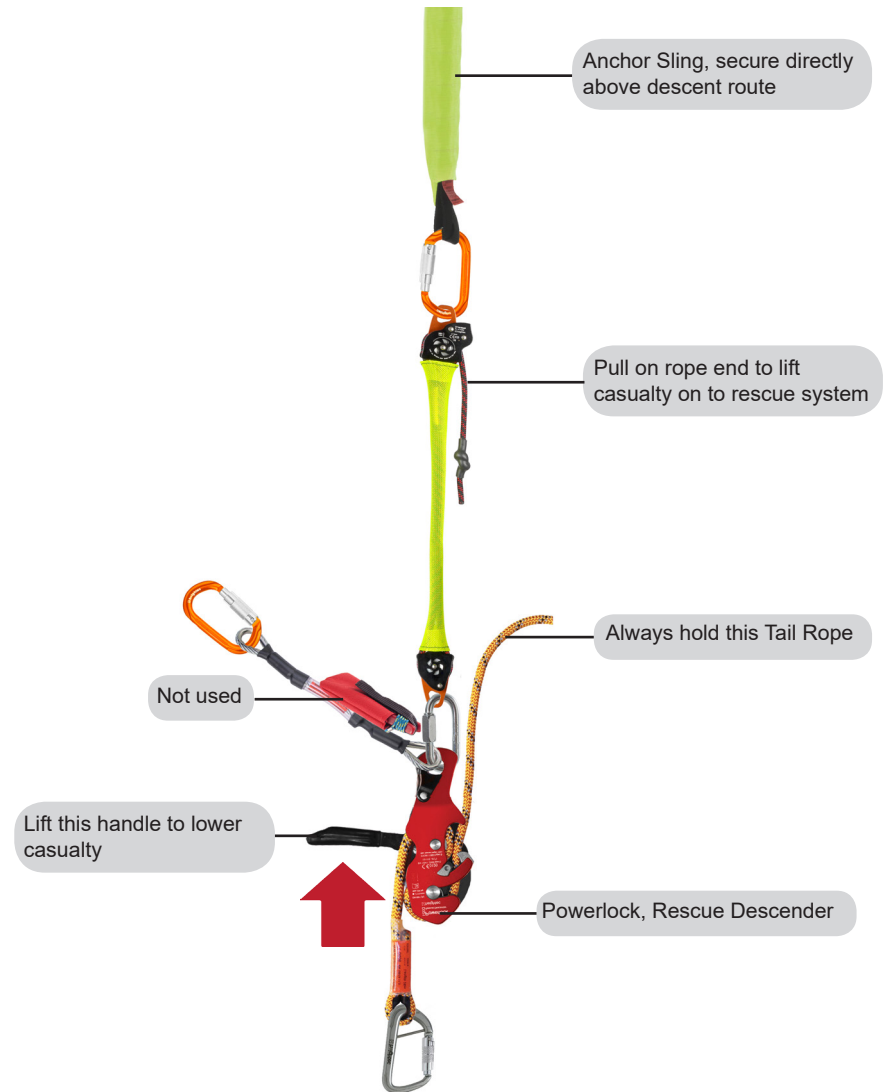

## WK37 - TowerPack Pro Rescue system

## User Kit Assembly Instructions

### Kit contents

CODE	DESCRIPTION
A030M	Wire sling, 30cm
B30	Kari Transport bag
CKA5	Altus karabiner
CKS3	Astra karabiner
CSP10	Screwlink pear 10mm
D321	Powerlock rescue descender
MSK2	Rescue shears with cord and pouch
RS110G	Tectra 11mm rope - 50m (WK37050)
RS110G	Tectra 11mm rope - 100m (WK37100)
S25N120P	Sling, nylon 120cm protected
YAS4	Kit Assembly. Pack, Tyvek Card, Instructions
P1015	Vantage 4:1 Locking Casualty Pulley, 1.5m



### Assembly

1. Feed rope into B30 Karibag. (WK37050 – 50m, WK37100 – 100m)
2. Captivate CKS3 on to sewn eye termination at the top end of rope, by hammering in captivation pin.
3. Attach S25N120P sling to CKS3 ensuring stitched end is on karabiner.
4. Thread Powerlock Descender on to rope, follow diagram marked on device. Powerlock approx. 30cm from karabiner end.
5. Put CSP10 screwlink into Powerlock attachment eye.
6. Attach the 30cm wire sling and shears cord to the CSP10.
7. Attach cord to shears and place in pouch, wrapping spare cord around shears handles.
8. Zip tie shears pouch (x 2) to 30cm wire strop. Opening at the CSP10 end.
9. Attach the P1015 Vantage to CSP10 using the pulley eye, non-locking end.
10. Clip CKA5 alloy karabiner to P1015 Vantage pulley eye, locking-end.
11. Hand tighten CSP10 screwlink in closed position.
12. Clip CKA5 alloy karabiner into CSP10 screwlink. Clip other CKA5 alloy karabiner to other end of shears sling.
13. Secondary person checks.
14. Add all User Instructions and prompt sheet x 2 security tamper tags
15. Fill out back section of Tyvek Kit Card and place into bag clear pocket, RESCUE facing out.
16. Attach and date security tamper tags to outer bag.

Disclaimer: It is the user's responsibility to assemble the kit correctly referring to individual product user instructions.